

RSA Install


1. Get your RSA components ready for install. From left to right. RSA, Solid Insert, Surefire O-ring.



Next Page



2. The battery jack is personal preference. Usually, we just have it touch the battery with the head installed. At this point you can install the insert.

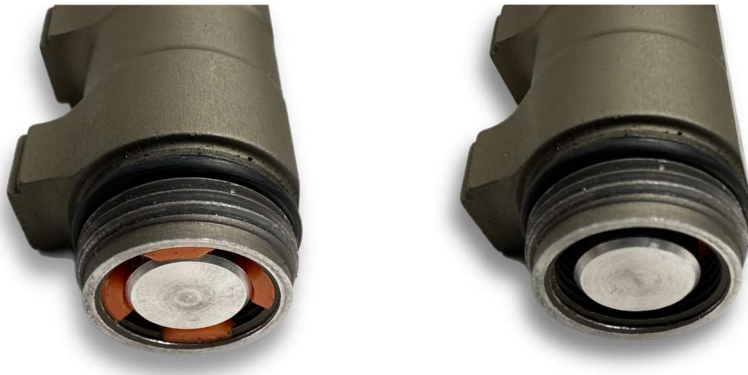

3. Install the Surefire O-ring. For the most part it comes pre-installed.



Next Page



4. Install the Surefire tailcap of your choice. Followed by a switch of your choice.



5. You are done!

